





C.E. SMITH COMPANY, INC. P.O. Box 9948 GREENSBORO, NORTH CAROLINA 27429
P: 336 273 0166 F: 336 273 0570 WWW.CESMITHCO.COM

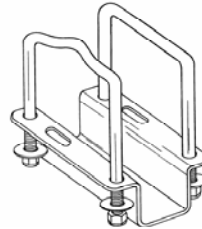

For 3" wide frame

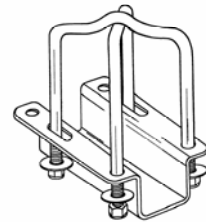

For 2" wide frame

INSTALLING SHORT BUNK STYLE BOAT GUIDE

P/N 27660

1. Place u-bolts as shown above for either 2" wide or 3" wide frame
2. Use 1 flat u-bolt and 1 formed u-bolt with washers and nuts to loosely attach each u-shaped bracket under or on top of trailer frame at desired locations.
3. Insert the short end of guide-on upright posts into each of the u-brackets to the desired width.
Do not fully tighten bolts.
4. Make sure the upright posts are seated level in the u-brackets before completely tightening the u-bolts. Finish tightening the u-bolt connections.
5. Attach left and right bunk assemblies to upright posts with 3/8"-16 x 2-1/4" hex head bolts, washers and nuts. Adjust angle of bunks as desired and tighten connections to hold in place.
6. Insert a black plastic cap on top of each upright post.

TOOLS REQUIRED = 2-- 9/16" WRENCHES

PARTS INCLUDED

NOTE:

If desired, use P/N 27630A galvanized
Bracket kit for raised mounting of
Trailer tail lights

2---Galv tube uprights	27609PG
2---Bunk sub-assemblies	27662
2---Galv. U-brackets	27603PG
2---Black plastic caps	11332
10--3/8"-16 Nylon locknuts	10810
10--3/8" USS flat washers	10960
2---3/8"-16 x 2-1/4" Hex head bolts	11022
2---3/8"-16 x 3-1/2" x 5" U-bolts	15258
2---3/8"-16 x 3-1/2" x 5" Formed u-bolts	15259